

# A81L

8.5"x11" Letter

## QLT Premium E-Z Peel Ink Jet Transfer Paper

Best transfer paper for your ink jet printer SINCE 1994!

### TIPS

- Do not apply to dark colored fabrics. You will not be able to see the transfer.
- It is best to wash the garment before applying transfer.
- After the transfer is dry, trim around the image, leaving a small clear edge (approximately 1/8") around the image. Clear background allows shirt color to show through.
- Wait 24 hours before washing for the first time.
- DO NOT turn shirt inside out before washing.
- DO NOT allow the garment to remain in the washing machine for any extended period of time.


### IMPORTANT:

- Not for use with any laser printers or color laser copiers.
- Use 100% cotton or polyester/cotton blend fabrics.

### PRINTING INSTRUCTIONS:

- Do we have any printing instructions.

### PRESSING INSTRUCTIONS:

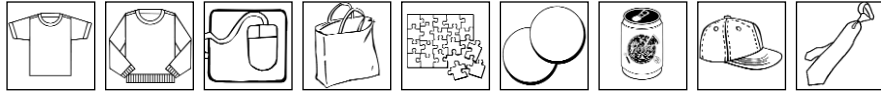

### TRANSFERRING WITH HEAT PRESS

- Pre-heat the heat press to 177°C/350°F - 191°C/375°F and allow the press to reach the set point.
- Place the image face side (image side) down on the fabric and press for 5-8 seconds.
- Peel paper immediately. Handle carefully, the paper will be HOT.

### TRANSFERRING WITH HAND IRON

- Pre-heat iron to the "hottest" setting (Cotton/Linen).
- DO NOT ADD WATER TO IRON. Make sure the steam setting is turned "OFF".
- Fold a pillow case in half and place on a smooth, hard, non-porous surface. Make sure the ironing area is smooth and free from wrinkles.
- Allow the transfer to dry completely and trim closely around image leaving a small clear border.
- Pre-press the area for 10-15 seconds to warm the fabric.
- Place image face side (image side) down on the fabric.
- Iron the entire paper/transfer 10 seconds.
- Place the iron on one corner, press down firmly while slightly moving the iron back and forth along the edge of the paper for at least 30 seconds. Reposition the iron and repeat until you have applied heat to the entire image area. (An 8.5"x11" area should take approximately 70 seconds.) If you are working with a small transfer, place iron over the entire paper/transfer and press for at least 30 seconds.
- Allow transfer to cool 10 seconds. Re-press the entire surface for 10-15 seconds. Quickly peel the transfer HOT starting at one corner.

### WASHING INSTRUCTIONS:

- Machine wash in cold water with a mild detergent. DO NOT USE BLEACH.
- Remove the washed garment IMMEDIATELY from the spin cycle.
- Tumble dry using LOW HEAT.



The POWER is in the PAPER.™

TOLL FREE 800-221-9832 • [www.QLT.com](http://www.QLT.com) • Local 914-668-2100 • Fax 914-668-2080

602 South Third Ave. • Mt. Vernon, NY 10550-4915 • Office Hours: Monday-Friday 8:30am - 5pm EST

REV. 0308 • Hamm Salmon